




EMS Brno

Data Acquisition Environment
Hardware – Software – Cloud application
www.emsbrno.cz

Increment sensor DRX - upgrade for small diameter

Change the base plate of dendrometer to measure trees with diameter between 4 – 8 cm

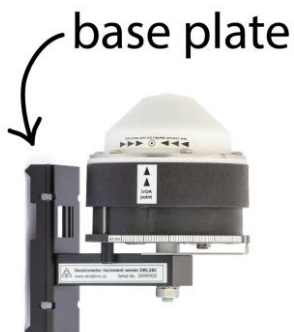


For stem diameter
8 cm and more



For stem diameter
between 4 and 8 cm


Replacement procedure

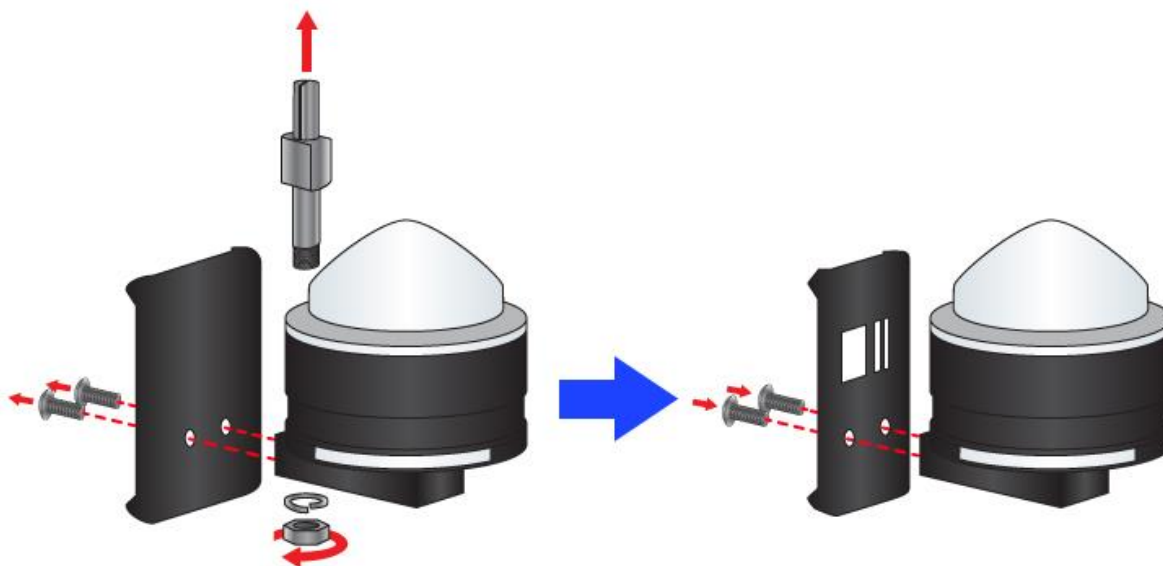

- Unscrew two screws holding the base plate.
- Unscrew the nut fixing the shaft and remove it.

- Screw on the base plate for smaller trees.
- Tighten the screws strongly.

Keep in mind that different types of screws may have been used - use the correct one according to the hole in base plate (supplied with the base plate).

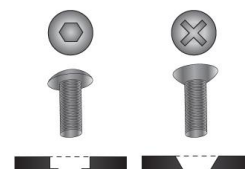

This type of base plate requires specific leading of the tape. Please notice each detail of leading and folding of the tape!

