

Water content reflectometers

CS616 / CS650 / CS655



Sensor installation

EMS Brno, April 2020

Michal Bellan

General notes:

- The more careful installation, the more reliable results.
- The probe rods should be kept as close to parallel as possible.
- Insertion guide tool holds the rods parallel during rod insertion.

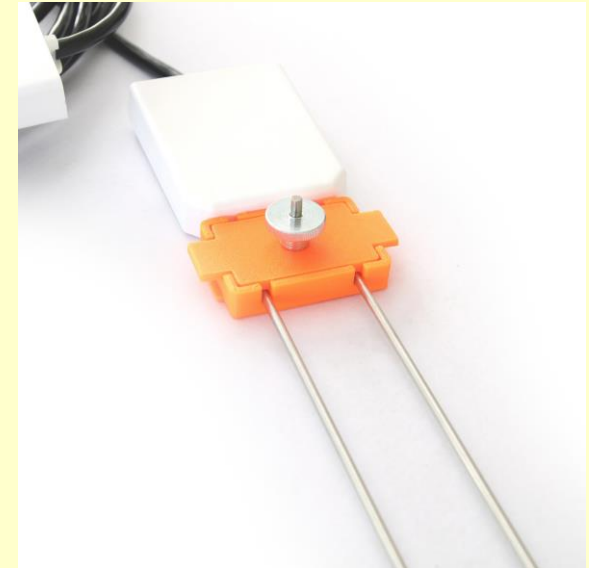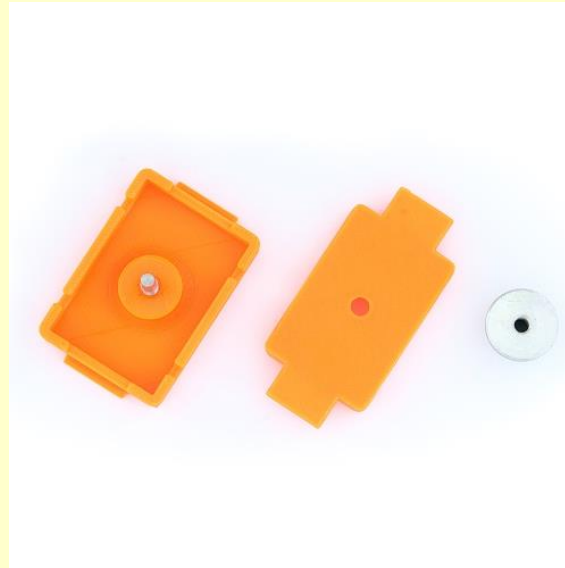

- Put the inserting guide tool on the end of sensor rods.
- Slide rods to the soil.

For more comfortable work you can remove inserting guide tool in half of rods length.



- Unscrew the nut
- Remove Insertion guide tool
- Insert the rest of rods until reach sensor body



Good luck!